


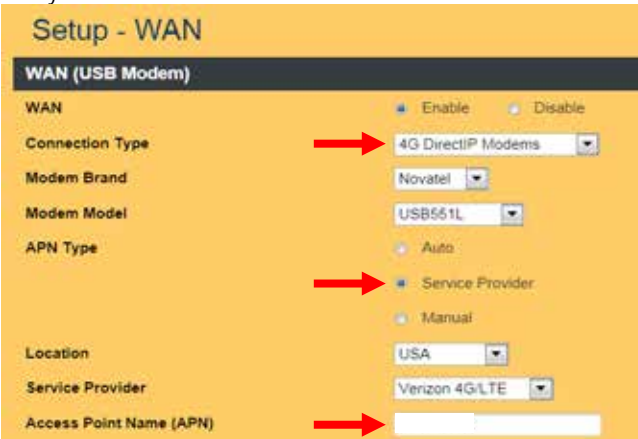



Tips for Verizon Wireless 4G/LTE Modems

BEFORE placing a modem into the LAN-Cell 3:

- Place the modem into a PC running VZ Access Manager (VZAM) (download from <http://vzam.net> if necessary)
- Check for modem firmware updates (Help>Check for Updates).
- Confirm that the modem is set for LAN mode, not WIN MB mode. See: <http://www.proxicast.com/AbsoluteFM/?f=245>
- Confirm that you can make a connection using VZAM.
- If you have been assigned a static IP address, check the Options>Preferences screen in VZAM to obtain the correct APN for your IP address. Confirm that VZAM is assigning the correct IP address when you connect.
- Consider locking your modem into 3G only or 4G only mode for a more reliable connection. See:
 UML290: <http://www.proxicast.com/AbsoluteFM/?f=224>
 USB551L: <http://www.proxicast.com/AbsoluteFM/?f=225>
 Configuration of the LAN-Cell 3 is exactly the same regardless of the modem's 3G or 4G mode.
- Configure the Proxicast router for your specific modem **before** inserting the modem into the router.



 UML290	 USB551L
<p>For static or dynamic IP's</p> 	<p>For dynamic IP's</p>  <p>APN is blank for dynamic IP addresses</p>
<p>Notes:</p> <ul style="list-style-type: none"> Access Point Name is always blank for the UML290. The external antenna connector is under the cover with the satellite symbol. Operate the UML290 with its black cover rotated 90 degrees (T-shaped). For JetPack 4620LE, please see: http://www.proxicast.com/AbsoluteFM/?f=259 The UML295 requires LAN-Cell 3 firmware v5.3.2. http://www.proxicast.com/support/downloads.htm 	<p>For Static IP's (replace xxnn.vzwstatic with your APN)</p> 